

WEEKLY

Outside Check under the RV for leaks, anything loose or that looks out of the ordinary

MONTHLY

Inside Defrost RV style freezer
Inside Check smoke detectors and fire extinguishers
Inside Check windows & screens
Inside Look under mattress, in backs of closets and cupboards for condensation / mold
Inside Clean air conditioner filters
In & Outside Check water line connections and drain fittings for leaks and tightness
Outside Check / fill water in batteries (if applies)
Outside Check all outside vents and make sure they are free of birds nests, etc.
Outside Check towing package. Hitch for cracks or loose bolts
Outside Inspect and grease truck electrical connection
Outside Inspect propane tanks for corrosion & damage / replace if any doubt exists
Outside Inspect roof seals and seams
Outside Grease suspension

QUARTERLY (January, April, July and October)

Inside Vacuum carbon monoxide and smoke detector covers, wash them with a lightly dampened cloth, dry and test. DO NOT spray the front panel with cleaning solutions and replace immediately if there is an issue
In & Outside Check batteries & electrical connections
In & Outside Lubricate hinges & locks
Outside Walk around and look for loose screws, cupboards, water leaks, etc.
Outside Sanitize the freshwater tank & lines
Outside Flush hot water heater 2-3 times annually & check anode rod (steel tanks)
Outside Keep awning maintained. Check for bugs, nests and debris
Outside Check brake lining, brake drum, tire, wheel seals & wheels for cracks
Outside Check emergency gear (boost pack, road flares, safety vest, etc.)

YEARLY

Inside Vacuum out all outside vents & mechanical stuff
Inside Clean sink drain traps
Inside Wash windows & screens (as necessary)
Inside Change batteries on keyless door locks
Outside Clean & service air conditioner units
Outside Check holding tank roof vents for blockage
Outside Keep brakes maintained
Outside Inspect & pack wheel bearings (or every 12,000 miles)
Outside Wash & wax outside