



Bargman 7 Way Plug and Cord

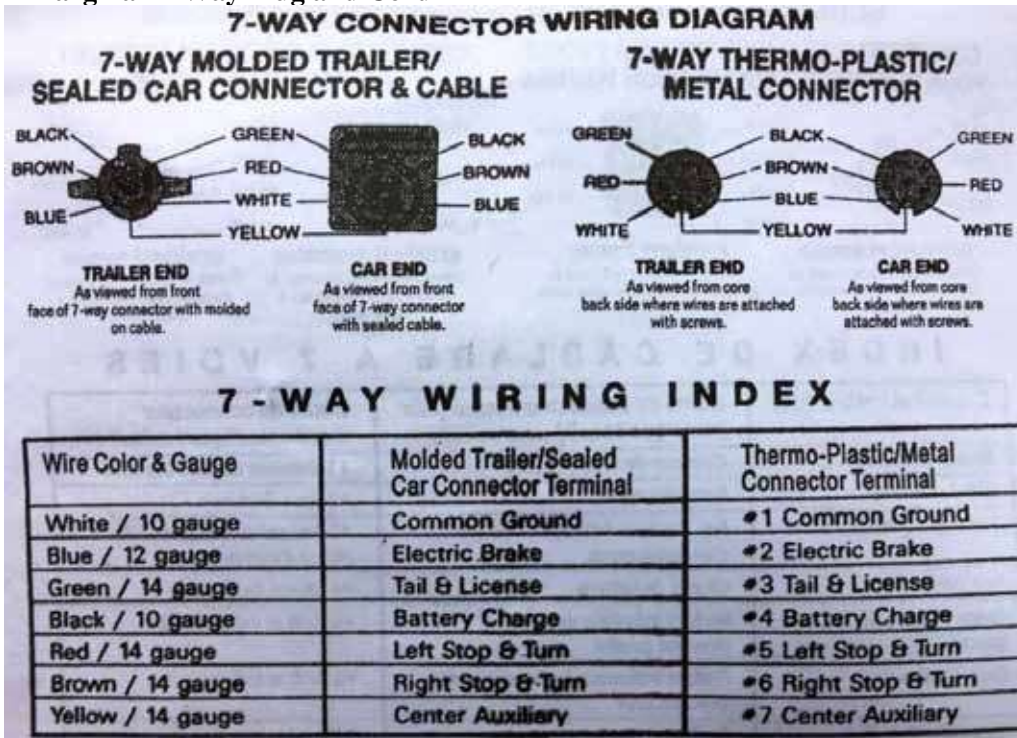

Bargman 7 Way Plug and Cord
 Black Wire Green Wire
 (As you are looking at trailer plug)
 Taillight & Marker Power

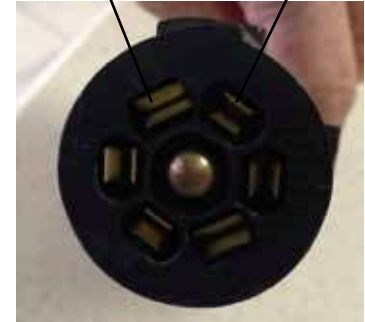

The **7 way power cord** is the critical link between your tow vehicle and your Airstream. While it is simple “plug and play” it does require some attention so brakes and exterior trailer lighting are ready to go when you are.

Before you hit the road, inspect the trailer plug and vehicle receptacle contacts for dirt, debris and corrosion. Check the power cord for cuts cracks or other damage. Clean the plug and contacts as required, ensuring a proper connection. Plug the cord in and test all trailer lights.

Have you ever been in an emergency situation and had to leave your trailer parked along the highway while you went to get help? You are concerned someone will not see the trailer and someone will run into your trailer; just use your 7 way cord to activate your marker lights.

Take a piece of wire about 3-4 inches long and strip back a half inch of insulation on each end and insert into the top two connections in the 7 way plug (#3 top left-marker light/taillight) (#4 battery charge-top right). This will power up



your marker and taillights. You can also use a **Heavy Duty** 4 way flasher module in the same two connections and your lights will flash, providing additional safety if tow vehicle is not attached.